


ATTENTION

Y-Strainers are now included with all Ondine ESS systems.
Please replace step 2 on page 13 with the following:

STEP 2

[STRAIGHT FITTING CONNECTION]


Connect 3/4 in. x 5 in. nipple, Y-Strainer, 3/4 in. x 2 in. nipple and ball valve to both hot and cold inlets on the TMV Module (FIG. H1).

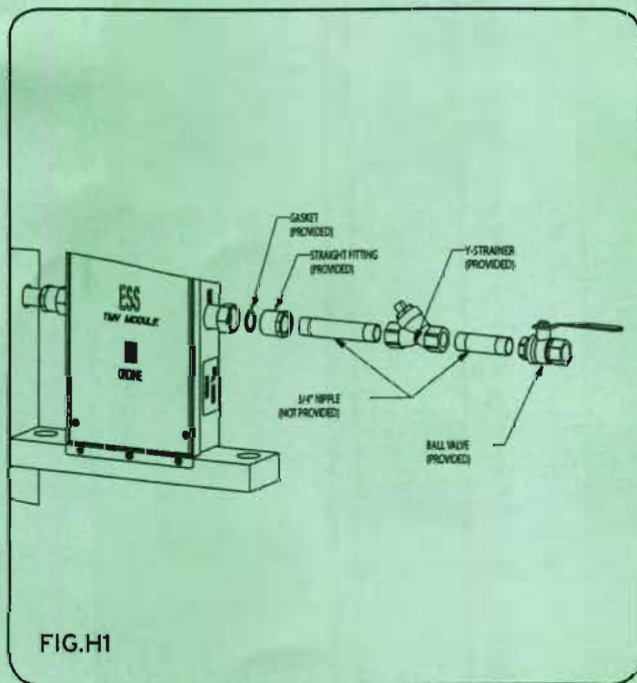

STEP 2

[ELBOW FITTING CONNECTION]

Connect 3/4 in. x 10 in. nipple, Y-Strainer, 3/4 in. x 2 in. nipple and ball valve to both hot and cold inlets on the TMV Module (FIG. I1).

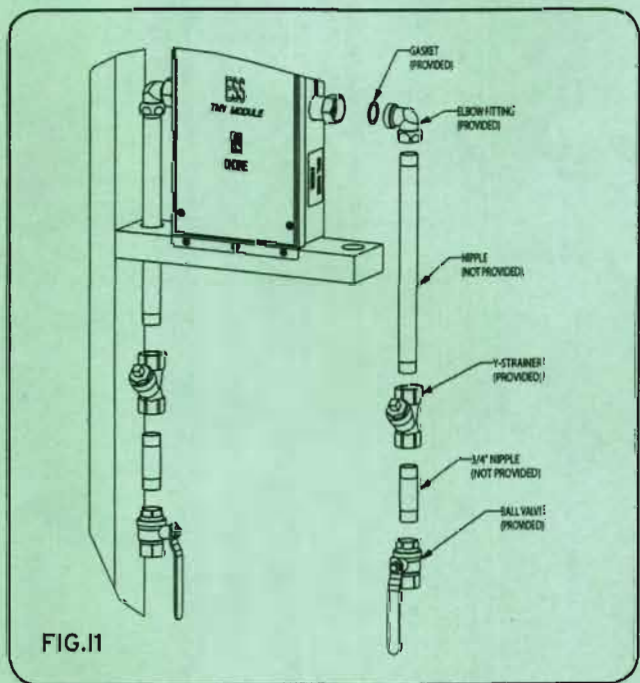

Interbath USA

800 423 9485 / 626 369 1841 Telephone 626 369 3316 Facsimile

Interbath Australia

1 800 648 753 / 03 9558 0655 Telephone 03 9558 0675 Facsimile

Interbath Canada

800 661 5361 / 905 624 3009 Telephone 905 624 0796 Facsimile

ONDINE
Luxury Shower Systems